



Applied Computer Systems, Inc.

Instructions for replacing the Compact Flash in the ACS MOBILE CONSOLE

- 1) If the Mobile Console is not currently turned on, power the console on by pressing the power button in the upper right hand corner.
- 2) Power down the Mobile Console by pressing and holding the power button for six seconds. This shutdown procedure clears the memory and is required to prevent damaging the Compact Flash during replacement.
- 3) Unlock the battery by sliding the toggle to the unlock position (figure 1 item 3).
- 4) Remove the battery by sliding the release switch to the left (figure 1 item 4) and pulling the battery free from the unit.
- 5) Remove the compact flash protective cover by removing the cover screw (figure 2) and lifting the cover to expose the flash card.
- 6) Press the push bar (Figure 3) to release the flash card.
- 7) Insert the replacement flash card face up and press in until the push bar has returned to its original position.
- 8) Replace the flash cover and cover screw (figure 2).
- 9) Replace the battery by sliding it back into the unit, until it locks into place.
- 10) Lock the battery by sliding the toggle to the lock position (figure 1 item 3).
- 11) Power on the Mobile Console by pressing the power button in the upper right hand corner.

PLEASE RETURN ORIGINAL Compact Flash TO ACS

