




PRE-INSTALLATION PREPARATION

THESE ARE THE PARTS YOU SHOULD HAVE RECEIVED


THIS IS WHAT WE CALL THEM

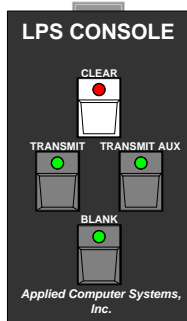

LPS CONSOLE
(LPSAUD-C)

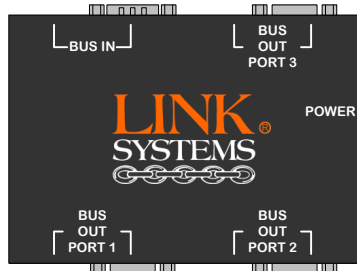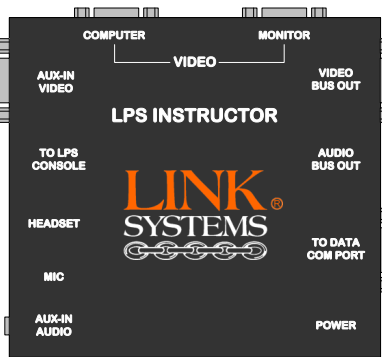

LPS INSTRUCTOR LC
AND (OPTIONAL) LPS
3 PORT SPLITTER

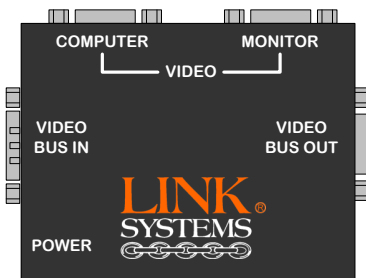

TRAINEE LINK CONTROL
UNIT
QTY. 1 per STUDENT



VIDEO PIGTAIL
1 per STUDENT (2/INSTR)



BUS CABLE (DB9)
QTY. 1 per STUDENT




INSTRUCTOR CONSOLE/
CABLE
QTY. 1 W/LPS



LPS POWER SUPPLY
QTY. 1 per 12 STUDENTS

INSTALLING THE LPS LINK SYSTEM pp.1


THESE ARE THE INSTRUCTOR CONNECTIONS

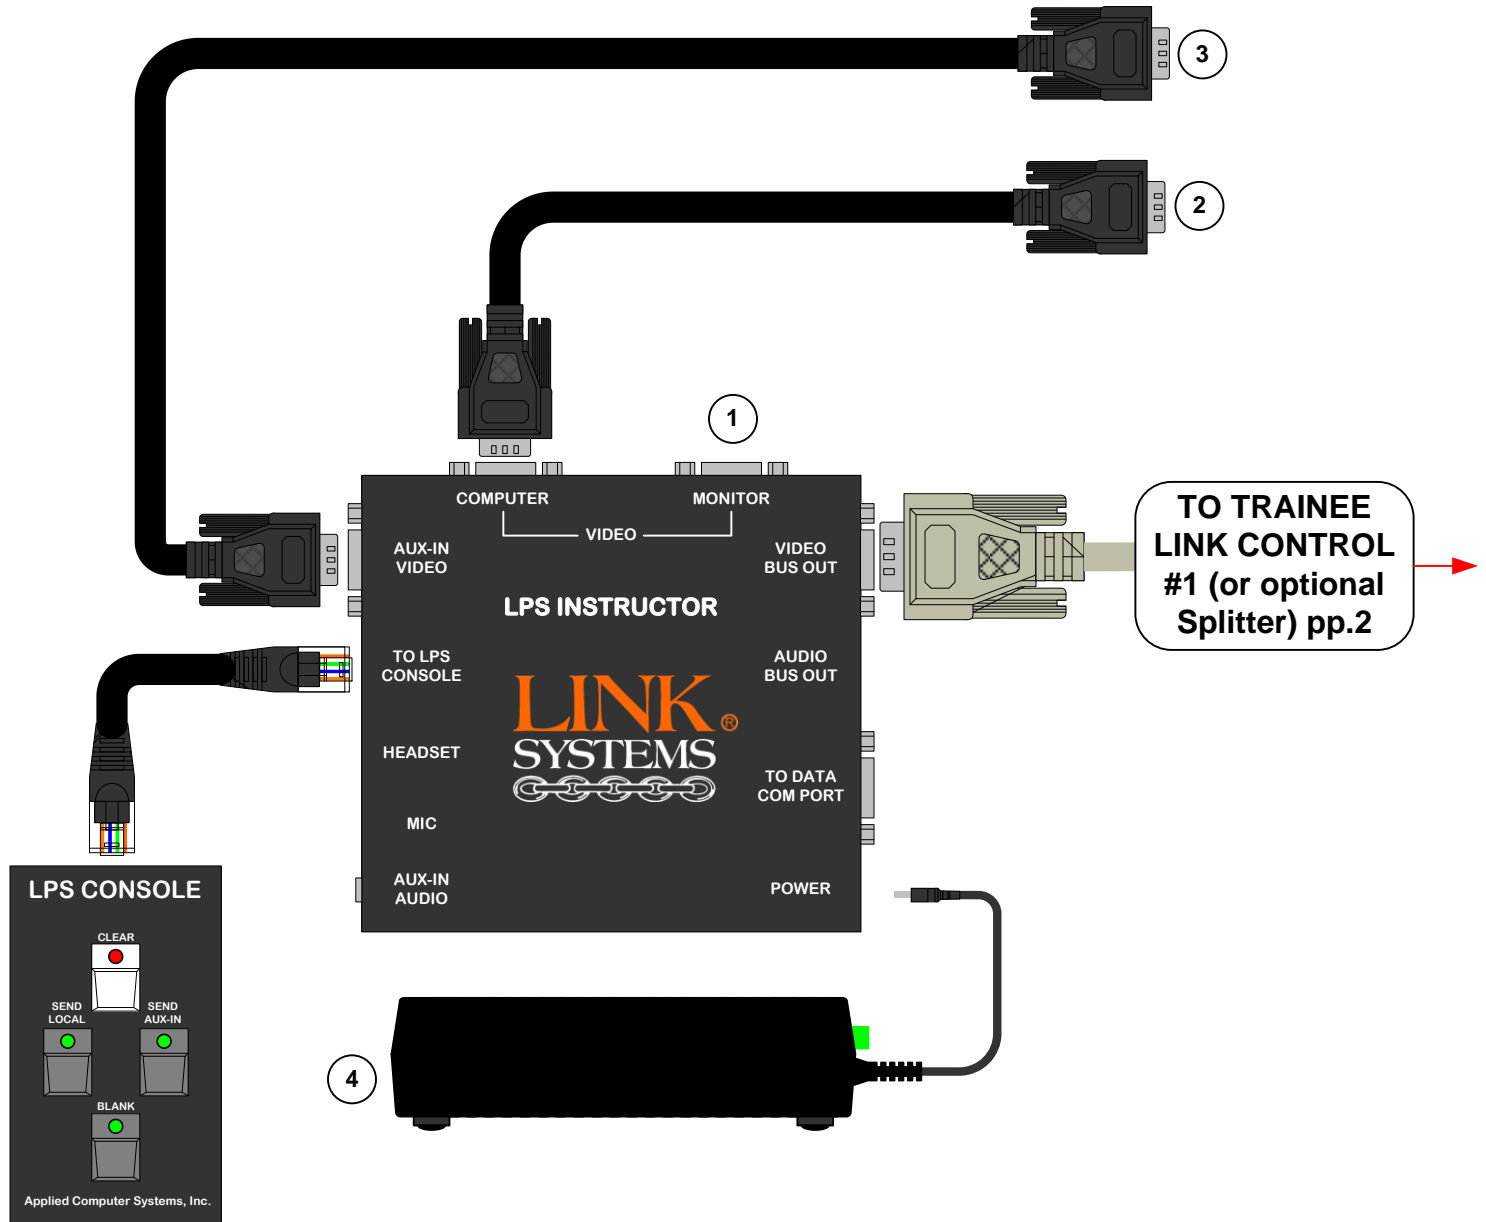

- 1 Connect your Instructor Monitor here.
- 2 Connect to your Instructor Computer VGA port. (where you normally connect your monitor)
- 3 Connect a laptop computer here (optional).
- 4 Connect the provided power cord here, then connect the other end to an AC outlet.

INSTALLING THE LPS LINK SYSTEM pp.2

THESE ARE THE TRAINEE CONNECTIONS

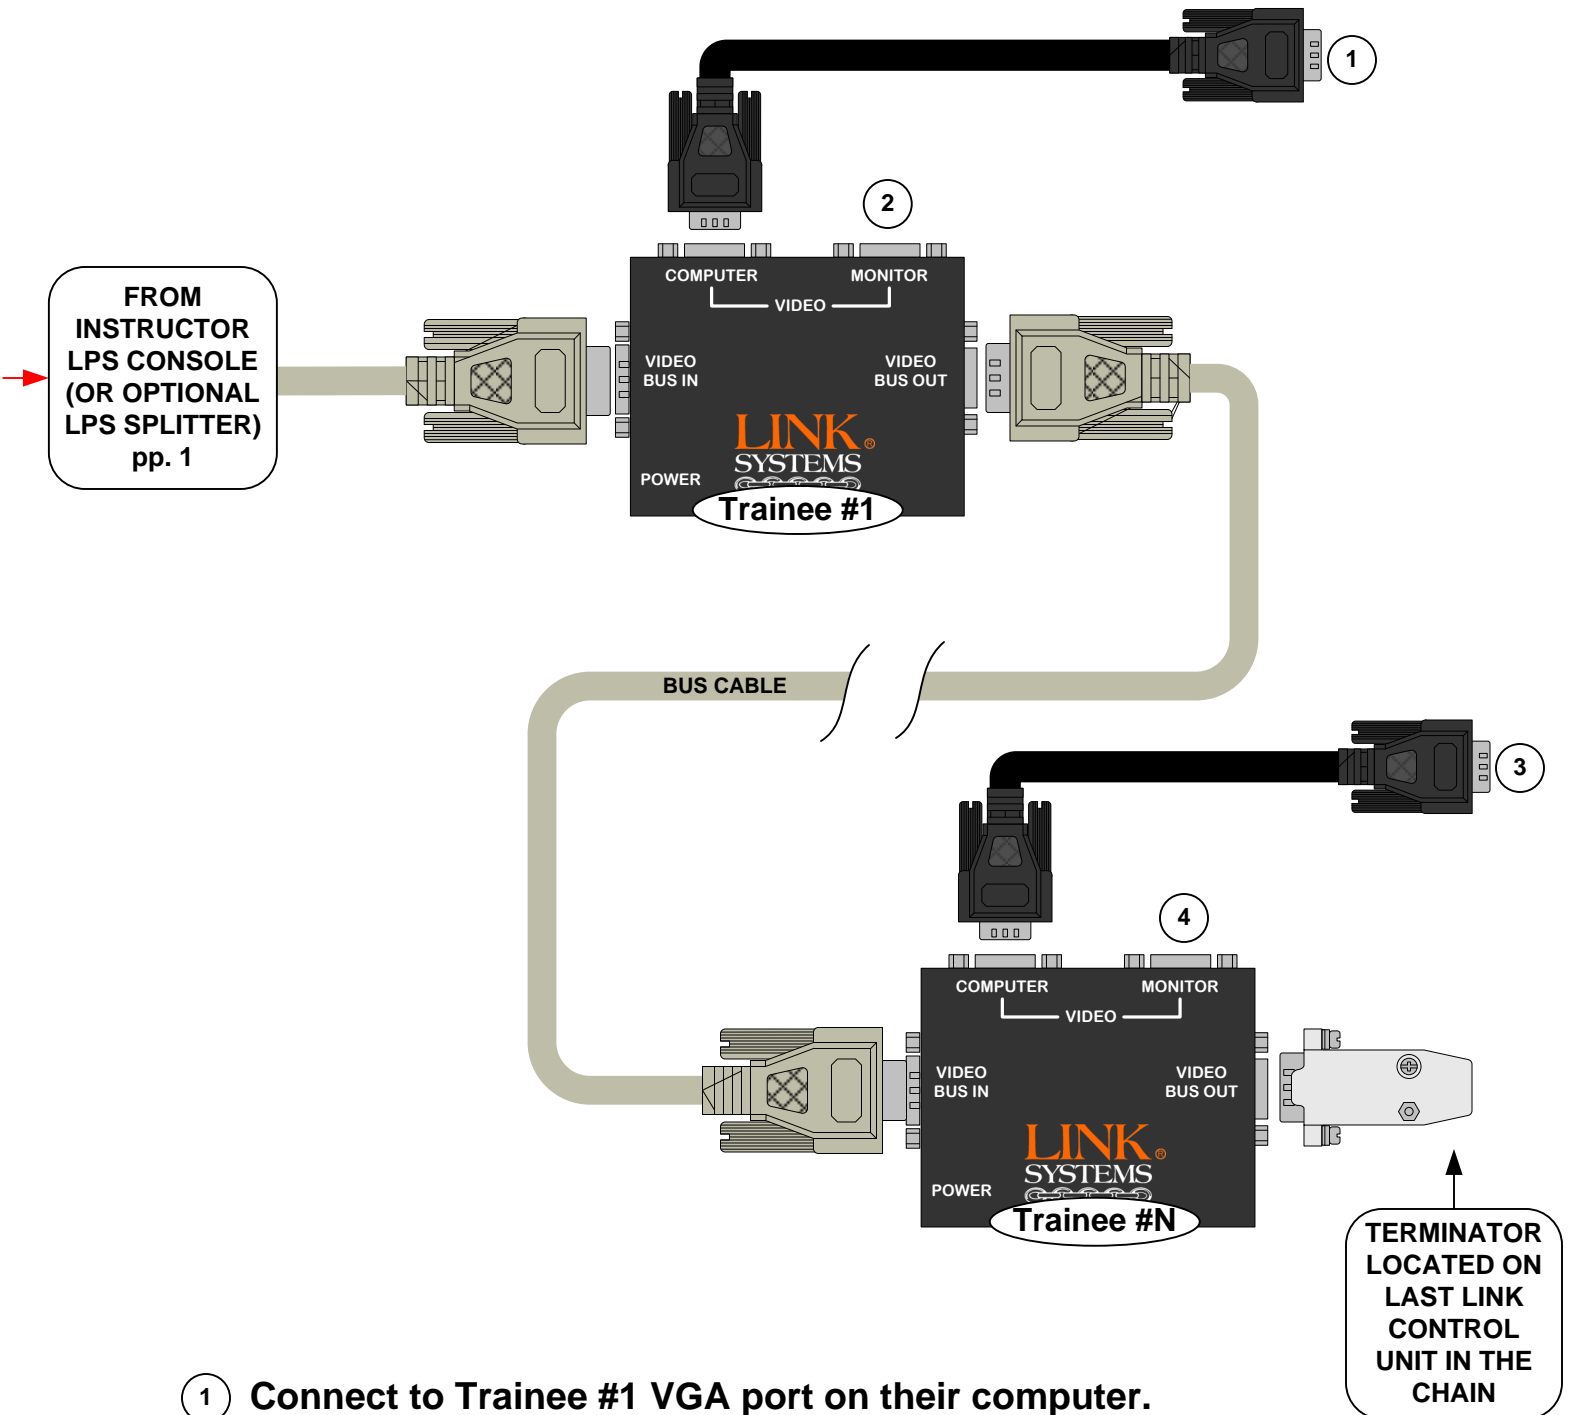

- 1 Connect to Trainee #1 VGA port on their computer.
- 2 Connect Trainee #1 monitor here.
- 3 Connect to Trainee #N VGA port on their computer.
- 4 Connect Trainee #N monitor here.

FOR TECHNICAL ASSISTANCE CALL 1-800-237-5465

OPERATING THE LPS SYSTEM

CLEAR: Pressing "CLEAR" switches all stations to "LOCAL" (stand-alone) mode . When in doubt always press "CLEAR" to start over.

SEND LOCAL: Pressing "SEND LOCAL" transmits the instructors display to all the trainees monitors. Press "CLEAR" when you are finished with this action.

SEND AUX IN: The purpose of this switch is to transmit out an Auxiliary source from the Instructor station (such as a laptop computer) to all the Trainee stations.

BLANK: Pressing "BLANK" transmits a black image to all the trainee monitors (great for lecturing). Press "CLEAR" when you are finished with this action.

